

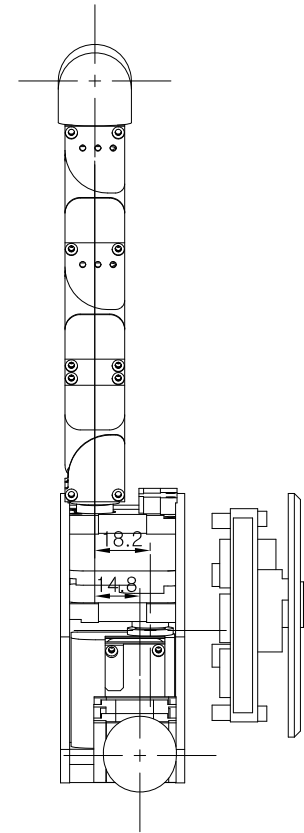
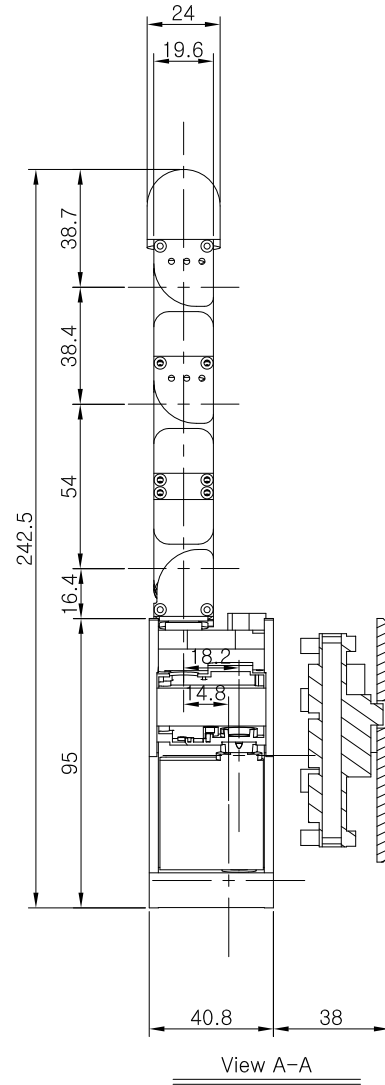
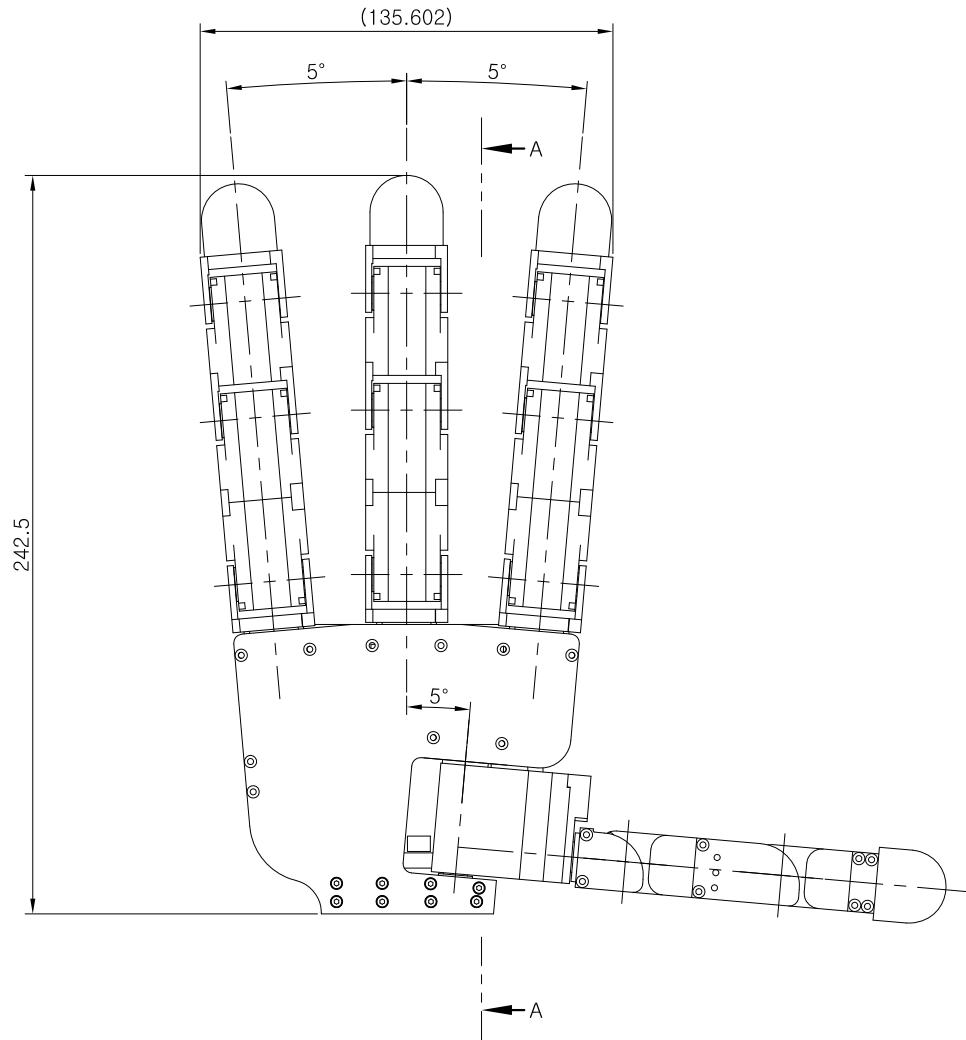


Allegro Hand Dimensions

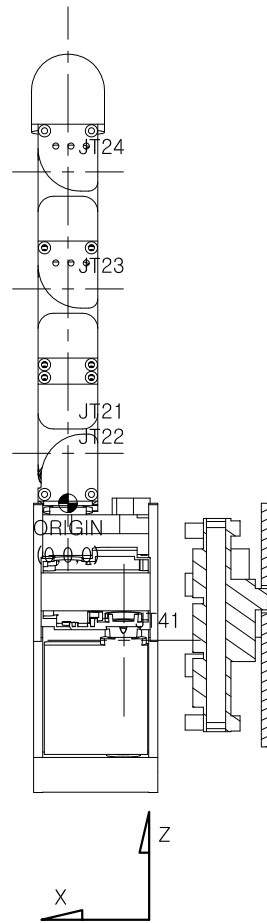


View A-A

Allegro Hand Joint coordinates

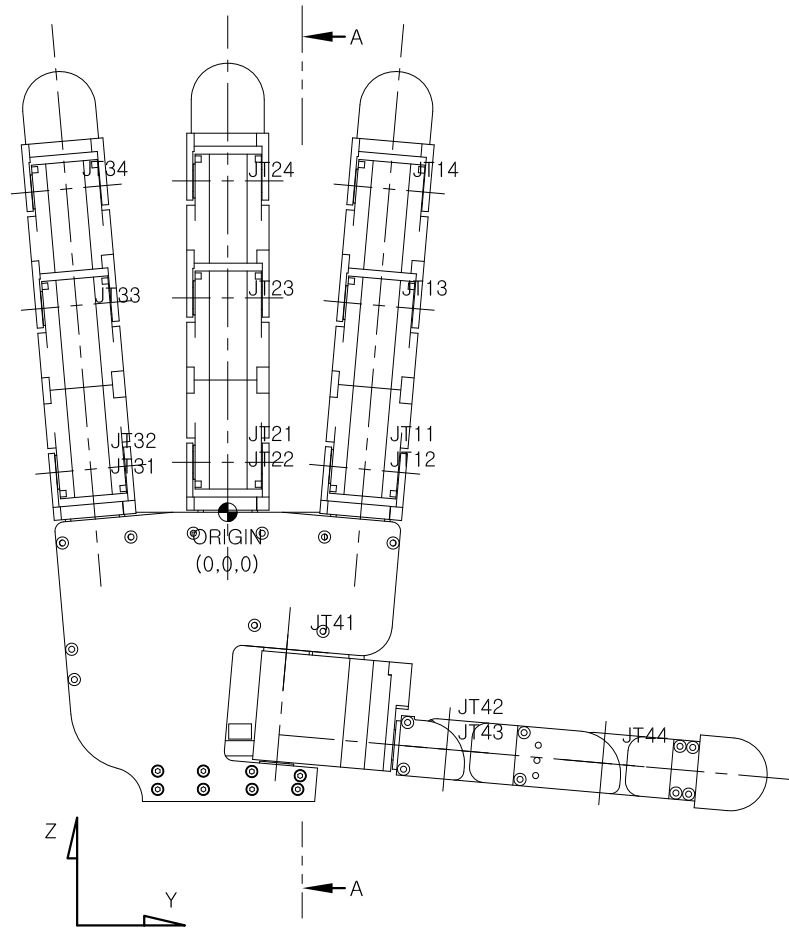


View A-A



Joint	X / Y / Z
JT11	0 / 44.981 / 14.102
JT12	0 / 44.981 / 14.102
JT13	0 / 49.687 / 67.897
JT14	0 / 53.034 / 106.151
JT21	0 / 0 / 16.4
JT22	0 / 0 / 16.4
JT23	0 / 0 / 70.4
JT24	0 / 0 / 108.8
JT31	0 / -44.981 / 14.102
JT32	0 / -44.981 / 14.102
JT33	0 / -49.687 / 67.897
JT34	0 / -53.034 / 106.151
JT41	-18.2 / 19.333 / -44.987
JT42	-14.8 / 71.865 / -77.891
JT43	-14.8 / 71.865 / -77.891
JT44	-14.8 / 123.07 / -82.371

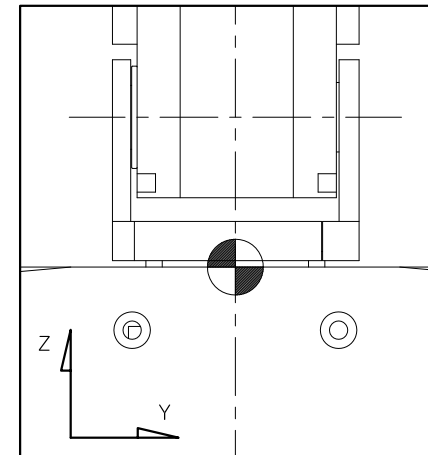

Origin Detail

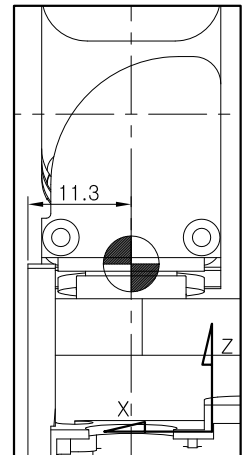

Allegro Hand Axis direction (Right hand)

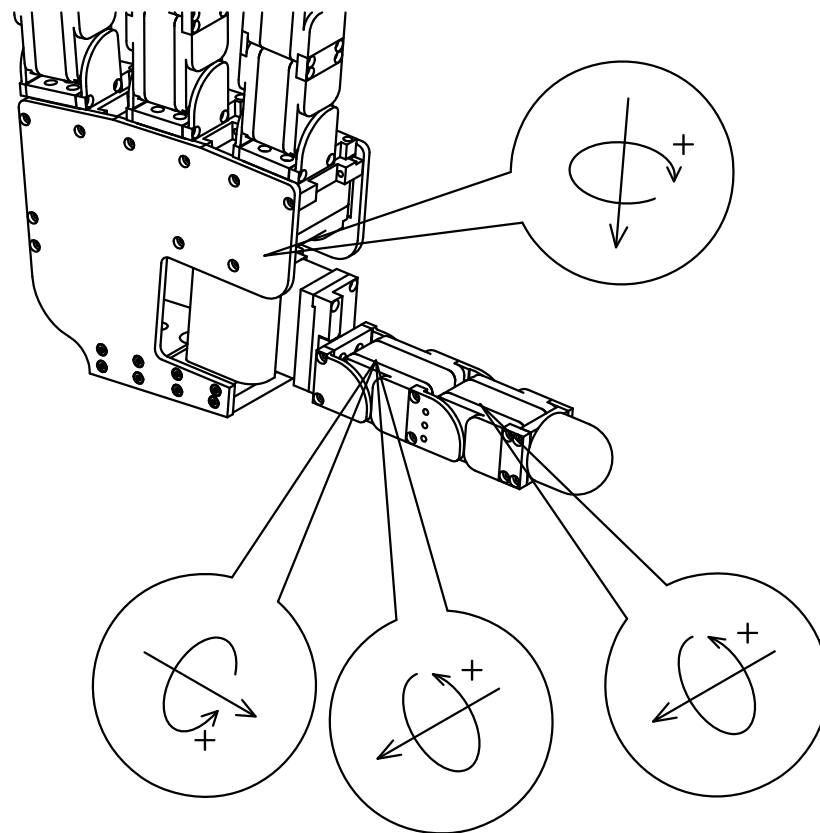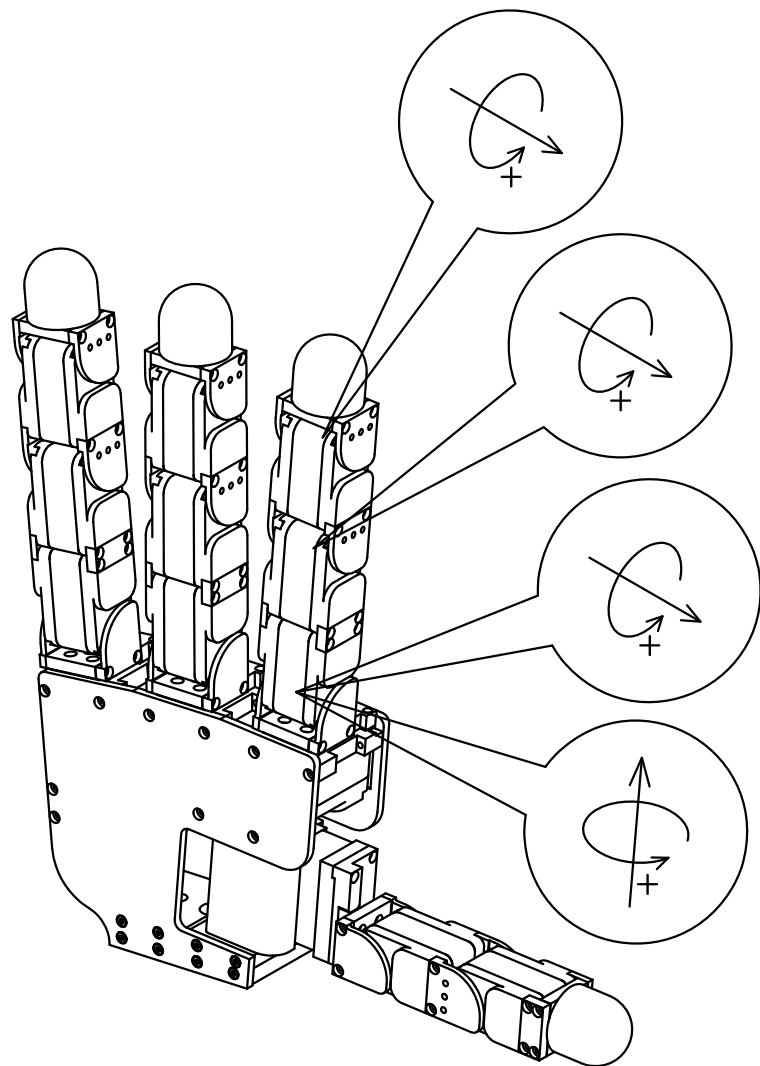

Allegro Hand Axis direction (Left hand)

